


H28

Tanaka

HTS-2530PF


S e r i a l N o .

H28-02 HTS-2530PF CRANK CASE

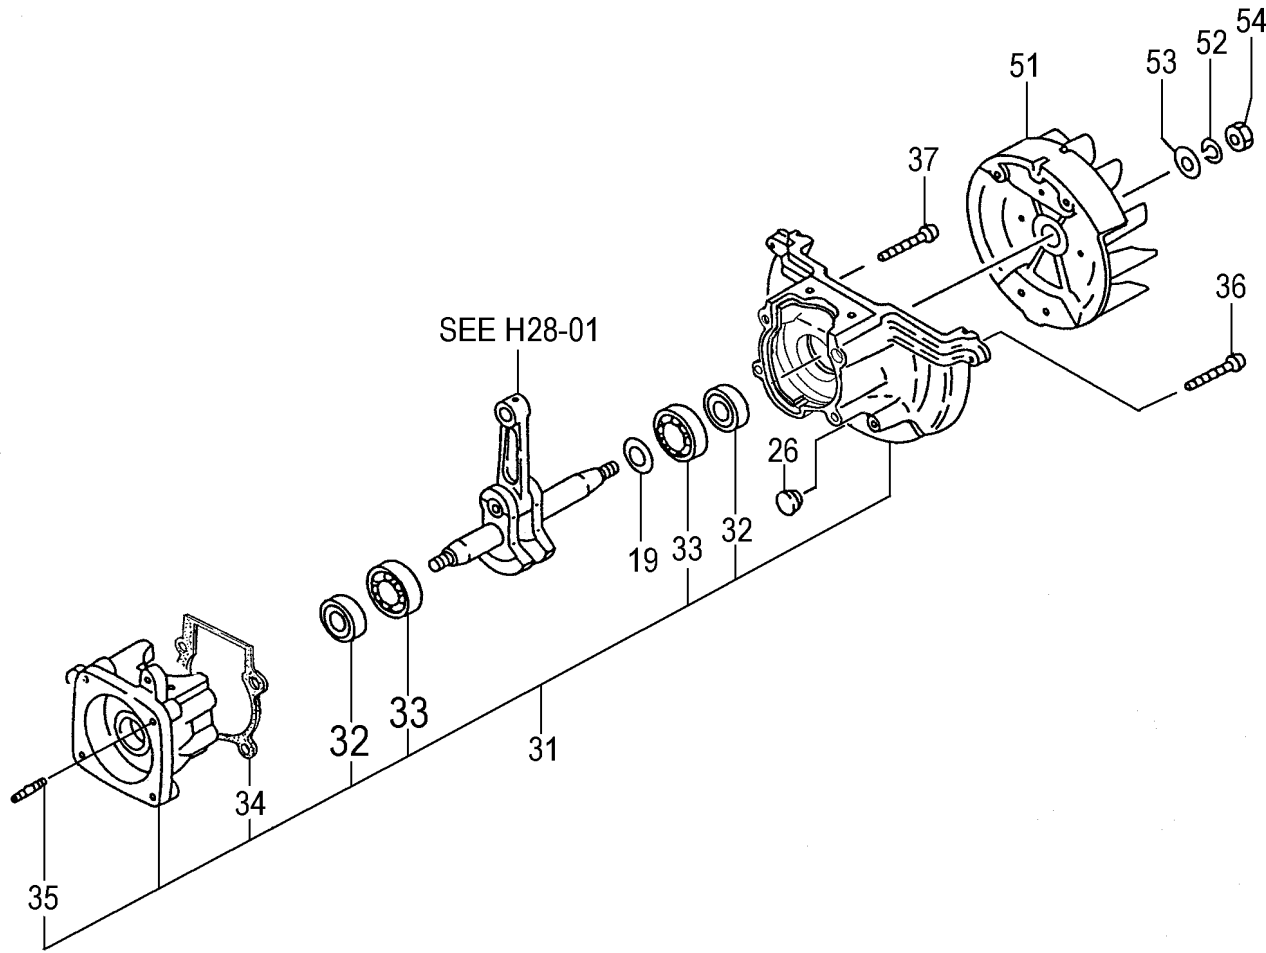


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
019	330-00200-21	V	
019	330-00200-22	V	
019	330-00200-23	V	
019	330-00200-24	V	
026	203-03002-20	1	
031	072-03002-90	1	
032	999-66122-200	2	
033	999-61600-100	2	
034	090-03002-20	1	
035	100-02100-20	2	
036	994-14050-301	2	
037	994-14050-451	2	
051	155-21744-80	1	
052	992-10080-012	1	
053	992-01080-011	1	
054	991-01080-011	1	

H28-03 HTS-2530PF ENGINE-1

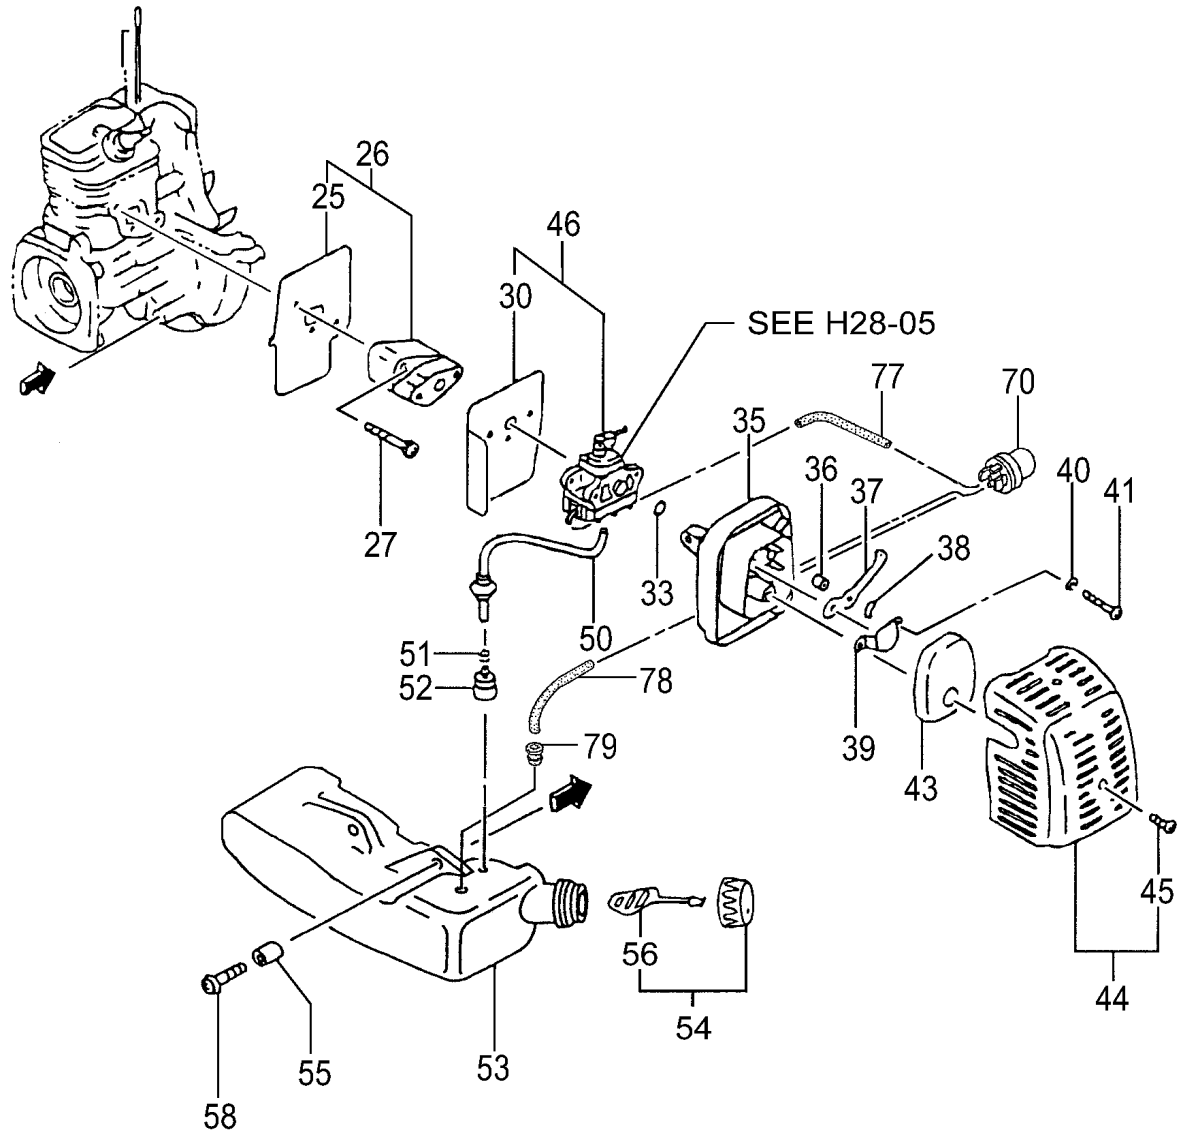


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
025	403-03002-20	1	
026	404-03002-90	1	
027	994-16050-241	2	
030	402-03002-20	1	
033	999-67015-000	1	
035	423-06500-81	1	
036	470-06500-20	2	
037	528-03002-20	1	
038	992-04080-031	1	
039	476-01700-20	1	
040	992-10050-012	2	
041	990-11050-602	2	
043	446-06500-21	1	
044	452-06500-91	1	
045	380-0637C-20	1	
046	455-03002-90	1	
050	223-07000-90	1	
051	680-00731-20	1	
052	675-04042-80	1	
053	591-03002-20	1	
054	595-01690-90	1	
055	659-00801-20	2	
056	626-32550-20	1	
058	994-63050-185	2	
070	442-25143-80	1	
077	700-02504-08	1	
078	700-02504-07	1	
079	534-32710-20	1	

H28-04 HTS-2530PF ENGINE-2

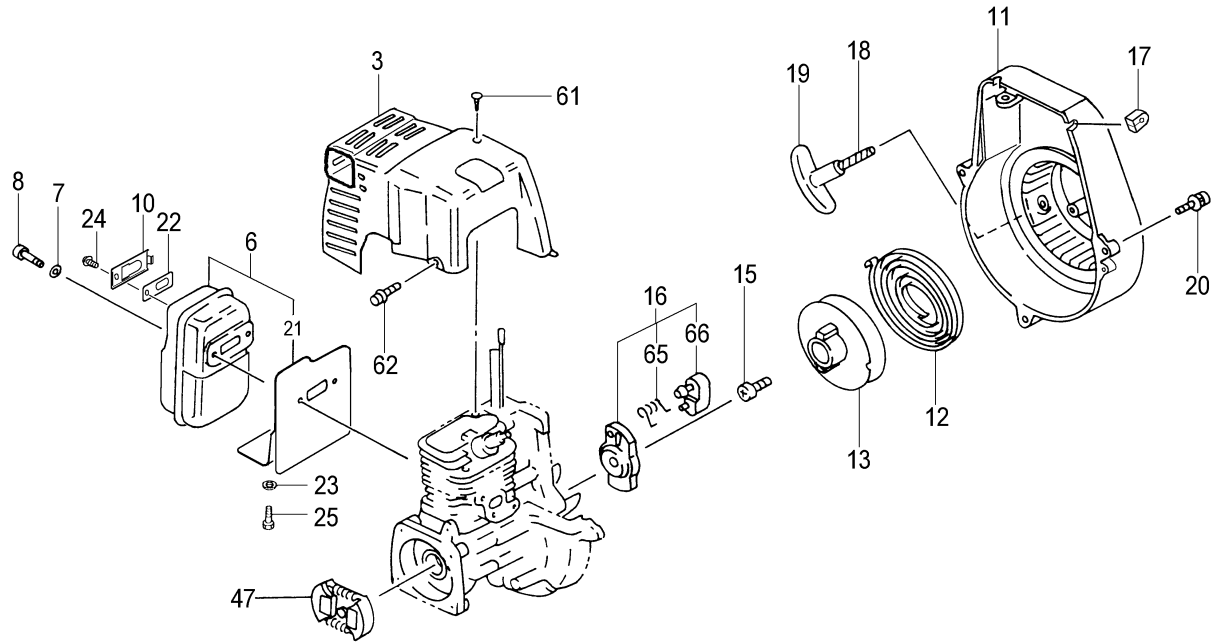


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
003	738-03002-20	1	
006	704-03002-90	1	
007	992-01060-011	2	
008	990-53060-553	2	
010	721-04400-20	1	
011	112-03002-80	1	
012	780-06097-20	1	
013	774-06097-20	1	
015	839-02010-20	1	
016	798-06500-90	1	
017	203-06000-20	1	
018	783-06097-20	1	
019	785-06410-20	1	
020	994-15040-162	3	
021	735-03002-81	1	
022	732-04400-20	1	
023	992-01050-011	1	
024	994-35040-081	1	
025	994-14050-081	1	
047	277-0634F-90	1	
061	990-73045-104	1	
062	994-25040-128	1	
065	790-06097-20	1	
066	788-06500-20	1	

H28-05 HTS-2530PF CARBURETOR

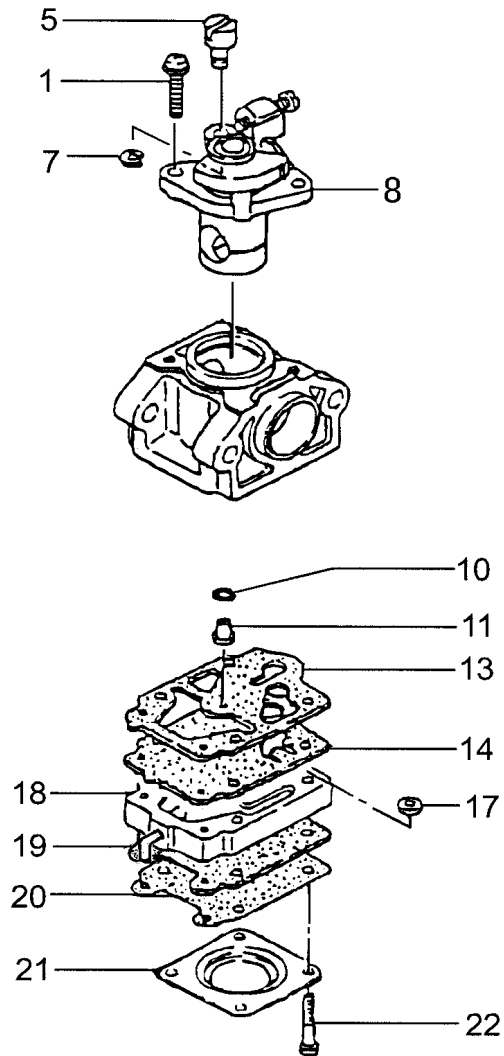


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	548-25140-20	2	
005	539-25120-20	1	
007	489-25100-20	1	
008	488-25145-80	1	
010	550-25100-20	1	
011	599-2001W-34	1	
013	577-25100-20	1	
014	576-25100-20	1	
017	578-25007-20	1	
018	575-25225-80	1	
019	475-25038-20	1	
020	474-25001-80	1	
021	476-25004-20	1	
022	548-25101-20	4	

H28-06 HTS-2530PF GEAR CASE

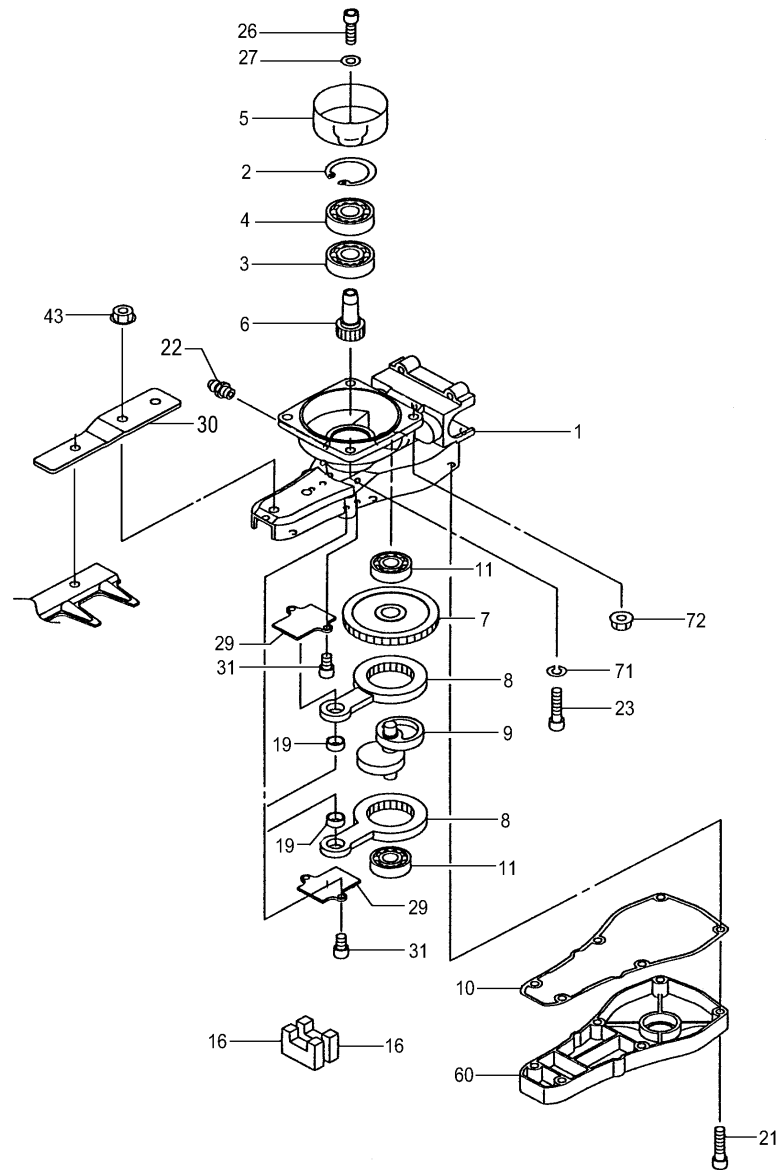


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	300-33185-20	1	
002	993-51026-002	1	
003	999-61600-000	1	
004	999-61600-002	1	
005	288-33185-80	1	
006	306-33185-20	1	
007	307-33185-20	1	
008	101-33185-80	2	
009	100-33185-20	1	
010	303-33185-20	1	
011	999-61608-000	2	
016	085-33185-20	2	
019	247-33185-20	2	
021	994-61050-254	6	
022	300-32250-80	1	
023	990-51060-183	2	
026	990-53060-153	1	
027	992-00060-011	1	
029	070-33185-21	2	
030	462-33185-20	1	
031	990-51040-103	4	
043	994-40060-011	2	
060	301-33185-20	1	
071	992-10060-012	2	
072	994-40060-011	2	

H28-07 HTS-2530PF BLADE

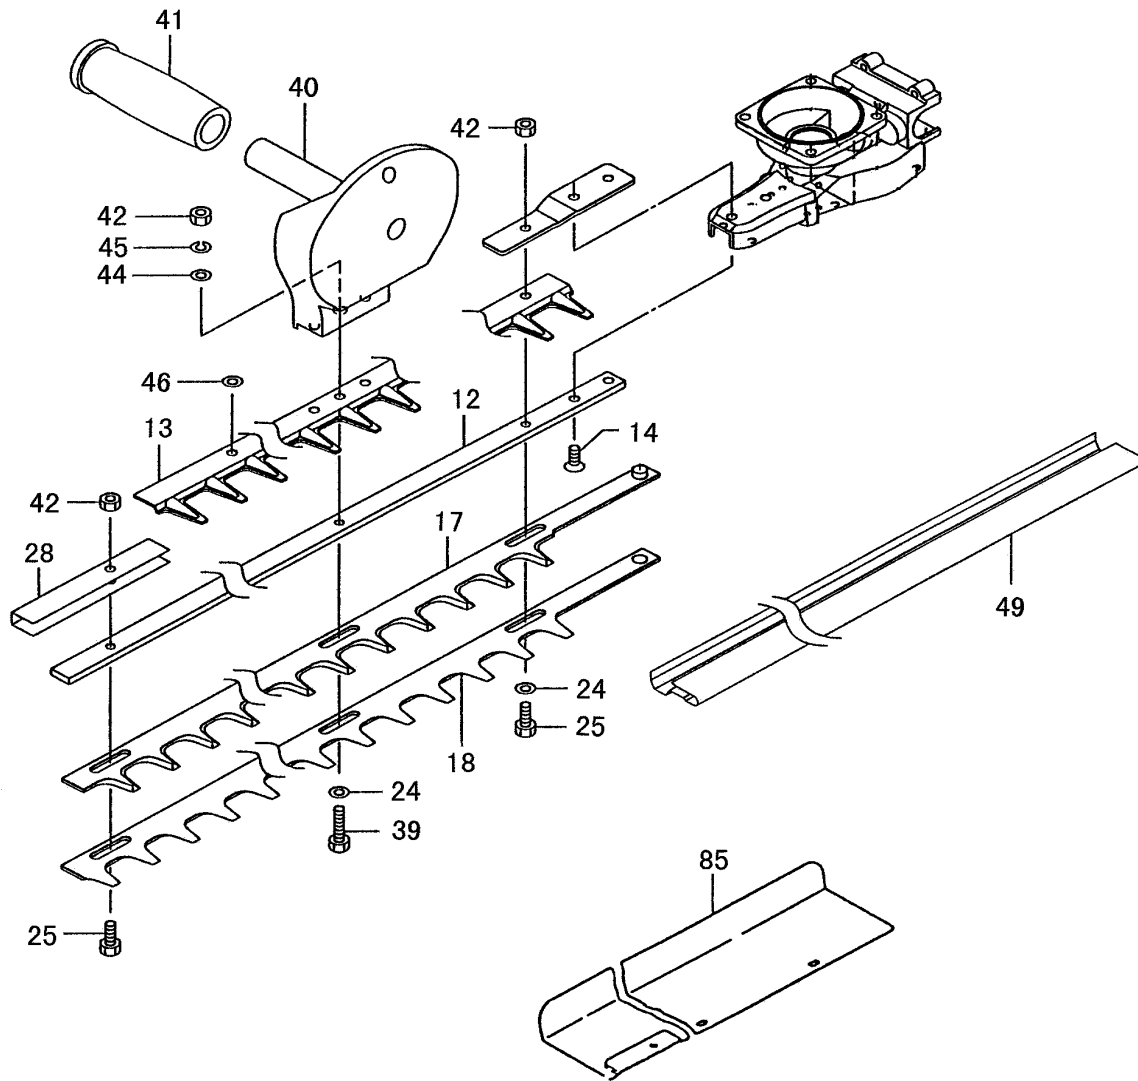

REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
012	122-33187-20	1	
013	136-3318B-20	1	
014	990-52060-253	2	
017	121-33187-20	1	
018	120-33187-20	1	
024	129-33202-20	4	
025	124-33202-21	4	
028	128-37904-20	1	
039	125-33202-20	1	
040	051-33185-81	1	
041	165-37590-20	1	
042	123-33202-20	5	
044	992-01060-011	1	
045	992-10060-012	1	
046	992-01060-011	3	
049	138-3318B-21	1	
085	350-33210-20	1	

H28-08 HTS-2530PF HANDLE

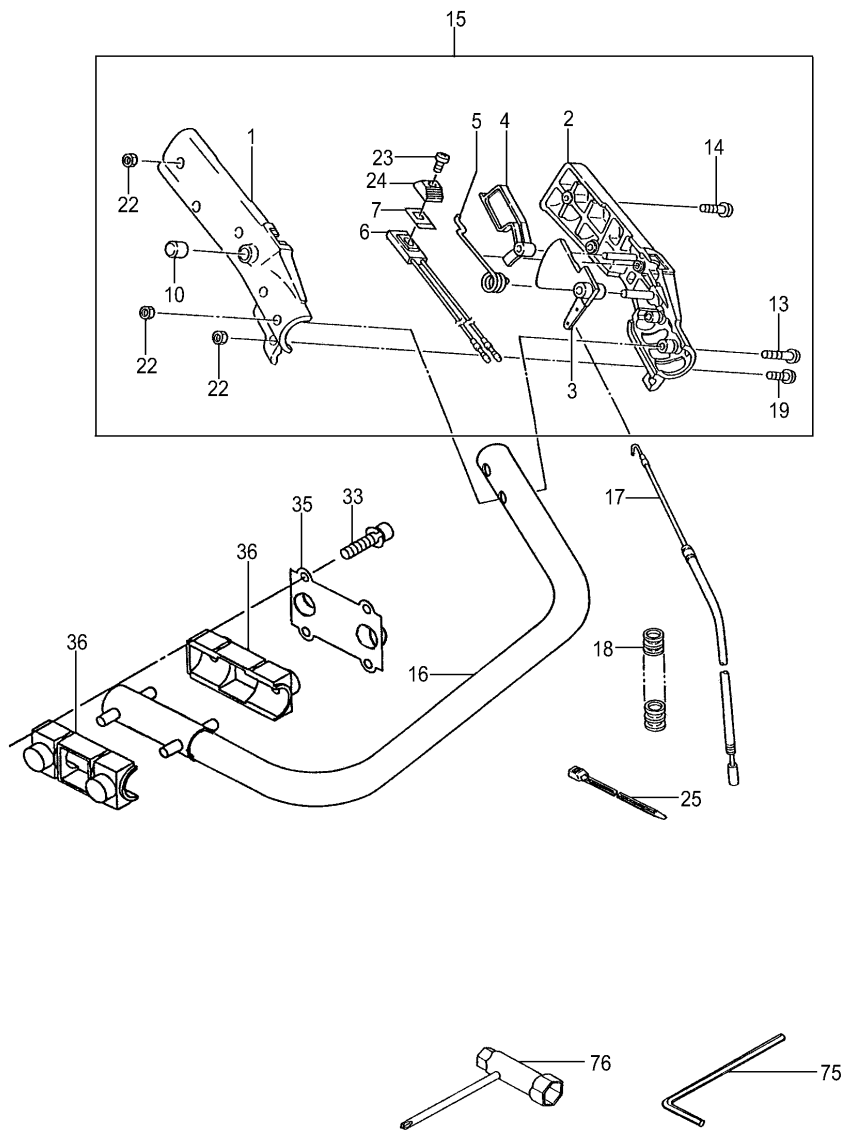

REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	053-33231-22	1	
002	054-33231-23	1	
003	230-33210-20	1	
004	231-33210-20	1	
005	061-32600-20	1	
006	170-33189-80	1	
007	925-32530-20	1	
010	765-32120-20	1	
013	994-16040-301	2	
014	994-16040-251	1	
015	055-33189-90	1	
016	050-33185-80	1	
017	885-0650J-80	1	
018	164-10015-00	1	
019	994-16040-161	3	
022	991-78040-010	6	
023	994-31030-101	1	
024	258-11650-20	1	
025	198-33130-20	1	
033	994-61050-124	4	
035	058-33185-20	1	
036	060-33185-20	2	
075	813-20000-20	1	
076	036-29331-50	1	