



# HIKOKI

## CHARGER

Item No.	Code No.	Description	No. Used	Remarks
1A	338710	CASE (A)	1	
1A	338710M	CASE (A)	1	FOR USA, CAN
*2	339341	TAPPING SCREW (W/FLANGE) D2X8 (BLACK)	7	
*2	339341	TAPPING SCREW (W/FLANGE) D2X8 (BLACK)	6	FOR USA, CAN
*3	339339	LED-SWITCH PCB	1	
*3	338723	LED-SWITCH PCB	1	FOR USA, CAN
4	338726	FUSE	1	
*5	338721	PCB ASS'Y (EUROPE, AUS, ASIA)	1	INCLUD. 4
*5	338720	PCB ASS'Y (USA)	1	INCLUD. 4 FOR USA, CAN
6	338725	FILTER	1	
7	338712	CASE (B)	1	
8A	376623	TP. TORX SCREW D3X18	4	
9	338717	RUBBER (A)	5	
10		NAME PLATE	1	
*11	339340	BRAND LABEL	1	
*11	338714	BRAND LABEL	1	FOR USA, CAN
12	338715	COVER	1	
13		NAME PLATE	1	
				FOR AUS, NZL
14	338716	AIR DUCT	1	
15	327174	TP TAPPING SCREW D3X8	2	
*16	500506Z	CORD	1	
*16	500507Z	CORD	1	FOR GBR, HKG, SAU
*16	500508Z	CORD	1	FOR AUS, NZL
*16	500499Z	CORD	1	FOR USA, CAN
*16	500509Z	CORD	1	FOR CHN
17	338718	USB CAP	1	
*18	339338	USB PCB (B)	1	
*18	338722	USB PCB	1	FOR USA, CAN
19	338724	FAN	1	
20	339337	USB PCB (A)	1	EXCEPT FOR USA, CAN
21A	370493	CUSHION	1	EXCEPT FOR USA, CAN
22	339342	FERRITE CORE	1	EXCEPT FOR USA, CAN

\* ALTERNATIVE PARTS